



Flow Indicator Assembly Instructions

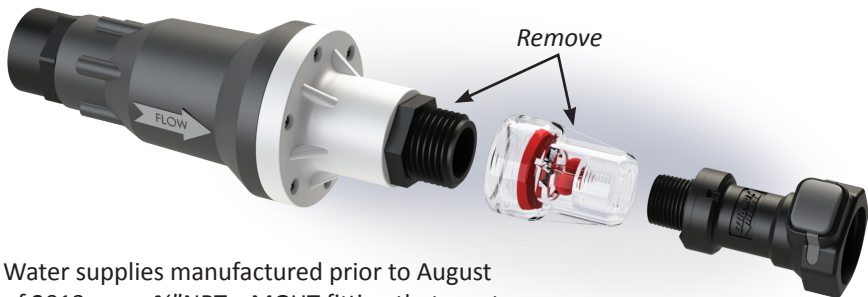

Water supplies manufactured prior to August of 2013 use a $\frac{3}{4}$ " NPT x MGHT fitting that must be removed before installing a BA-FLW-60 or BA-FLW-80 flow indicator.

Wrap threads 2.5 times with a 6" length of .5" PTFE (Teflon style) tape prior to threading into flow indicator. Tape should be wrapped in a clockwise direction and should not overlap or cover the inlet of the coupler. Coupler should be hand tightened only. (BA-FLW-60 only)

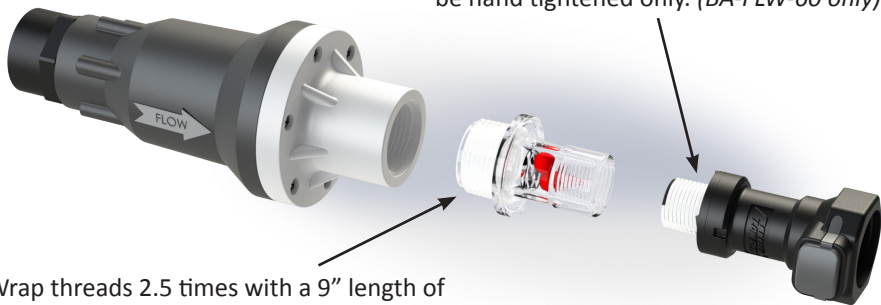

Wrap threads 2.5 times with a 9" length of .5" PTFE (Teflon style) tape prior to threading into regulator. Tape should be wrapped in a clockwise direction and should not overlap or cover the inlet of the flow barrel. Flow indicator should be hand tightened only.

